WERSI DIRECT LIMITED

Pegasus Wing V2 R0.03

USER MANUAL

PEGASUS WING

PROFESSIONAL KEYBOARD

WERSI PEGASUS WING V2.3 SOFTWARE (V2.0 R0.03).

Date: 07/11/2013

Language: English (UK).

WERSI DIRECT LTD
Unit W
Rose Business Estate
Marlow Bottom
SL7 3ND.

0800 084 2013
info@wersidirect.com

About This Manual:

This manual provides information about the new Pegasus Wing software update 2.0 R0.03 onwards. WERSI provides new software updates on an ongoing basis. New software updates can include new functions, new innovations, sounds, styles, presets and more. Of course there are also additional sound activations that are added too.

PLEASE NOTE: Specifications can change without prior notice.

Welcome...

WERSI released the new Version 2 software for all Pegasus Wing customers to coincide with the launch of the Pegasus Wing 2.0 Keyboard model.

We're pleased to confirm that Version 2 of the OpenArt-System for Pegasus Wing contains new functions and expansions! The functions and new drawbar system are completely free of charge, while the expansions are available at an additional cost, adding new Sounds, Styles, Drums and Total Presets etc.

Some hightlights of the new Version 2 software is:

- ***New MIDI Sequence Editor!***
- ***New Style Editor / Style Part Mapper!***
- ***New VB3 Drawbar System!***
- ***New VB3 Organ Sounds!***
- ***VST Editor and VST Control Page***
- ***New MIDI Modes!***
- ***New Expansions!New Robert Bartha Live! Total Preset Registrations from his 2012 Live Tour!***
- ***New Claudia Hirschfeld Songbook - form the Prima Ballerina of the keybord!***
- ***New Expansions!***
- ***New Total Preset Saving Options and Functions!***
- ***New Style Expansions!***
- ***New Professional Factory Total Presets!***

Naturally, we invite you to load the new software, available from www.wersi.net to download and install. If you are unfamiliar with loading a new OAS software update, please refer to your English User Manual, or download it from www.wersidirect.com

New 'Save' Options for Total Presets

From software version V1 R 1.02 the possible options to save the total registrations (total presets) have been extended.

When you save a preset total , every currently active setting on your instrument (as you have set on your instrument) is saved perfectly as heard at the time of saving. This way it is ensured that the recall of the total presets means that the instrument , regardless of the currently active mode , is re-set backup exactly as you saved it at the time of saving your Total Presets.

A simple example :
They have a preset saved with a total volume of 20 on the upper manual . Then adjust the volume , for example, 127 by pull out the volume knob. Now select the saved preset total again. It will instantly reset back to a total value of 20.

For the majority of customers this way of storage is sufficient. If you do not need the advanced Preset Saving Options , you can skip to the next chapter .

However, there may be times when you want to be specific and save only currently active changes you've made specifically for a certain preset or song piece. Saving the preset as previously described means that even if you change to a new total preset, some of the standard settings will be retained.

In normal storage of presets total , would the currently selected overall sound for each preset call will return to the setting that you had just chosen when saving the presets. To play all total presets with a different overall sound , you would need the above method to save each preset many times - once for each desired overall sound.

Or you want to retain the currently active transposition for the next preset. Previously this was not possible and if you changed to a new Total Preset, the transposition of the currently active preset would be retained.

These and similar problems you can solve elegantly over the expanded storage options.

Proceed as follows:

If you want to save, select a preset total:

1. Press the 'Save Preset As' button on the MAIN DISPLAY.

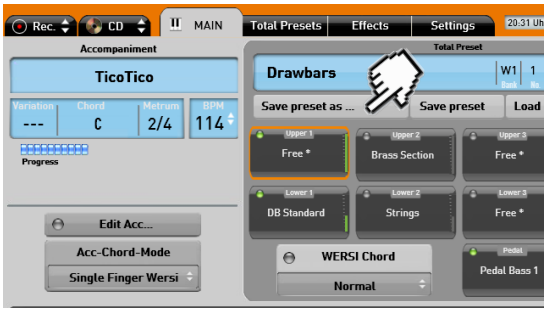

Press the flashing 'User' button >

You'll notice that to the left of the main display, in the Total Preset group of physical buttons, the background of the 'User' button starts flashing. Press the button on the control panel next to the preset buttons . The screen displays a list of your previously saved presets. See the example below:

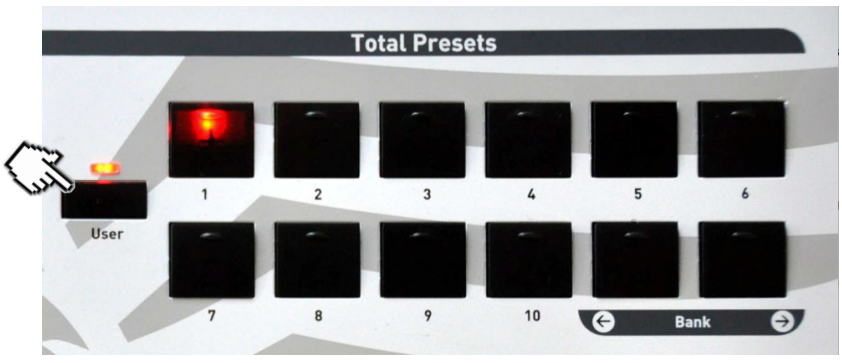

At the bottom left of the new 'Save preset as' display you'll see that there is a button called 'Eweitert'. This is German for 'Advanced'.

Press on the 'Erweitert' button to progress to the 'Save Options' screen.

The following display is now shown:

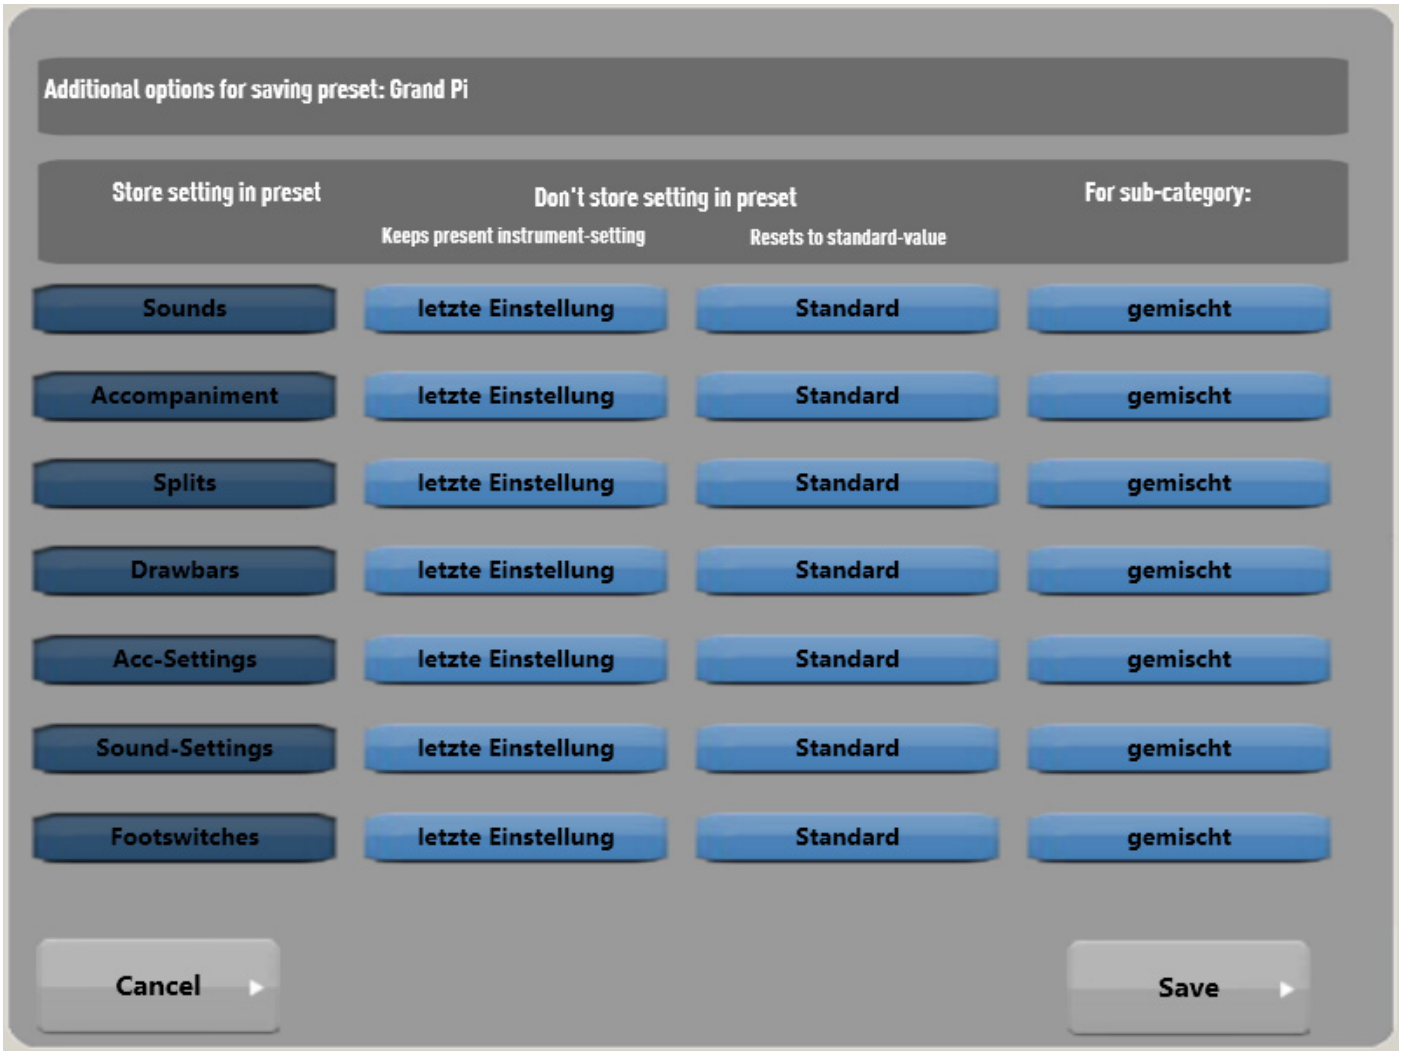

For clarity, all the possible settings are combined in groups in the instrument, which are in turn classified into sub-groups for individual settings.

The next pages will show you the different groups and the respective settings.

Name of the Currently Selected Total Preset in use, which the Save Options will effect.

Sub Category button: This allows you to go into the Sub Category to make individual changes to the Total Preset Save Options.

The far left column shows us the name of the respective instrument part group. ***For example, Sounds, Accompaniment, Keyboard Splits, Drawbars etc. Use the 'Gemischt' button on the far right to enter the Sub Category for additional setting options.***

Letzte Einstellung - this translates into 'Keeps Current Instrument Settings'. Press this button to ensure that this happens when saving.

Standard Button - Literally resets the value of the respective group part to their Standard Values.

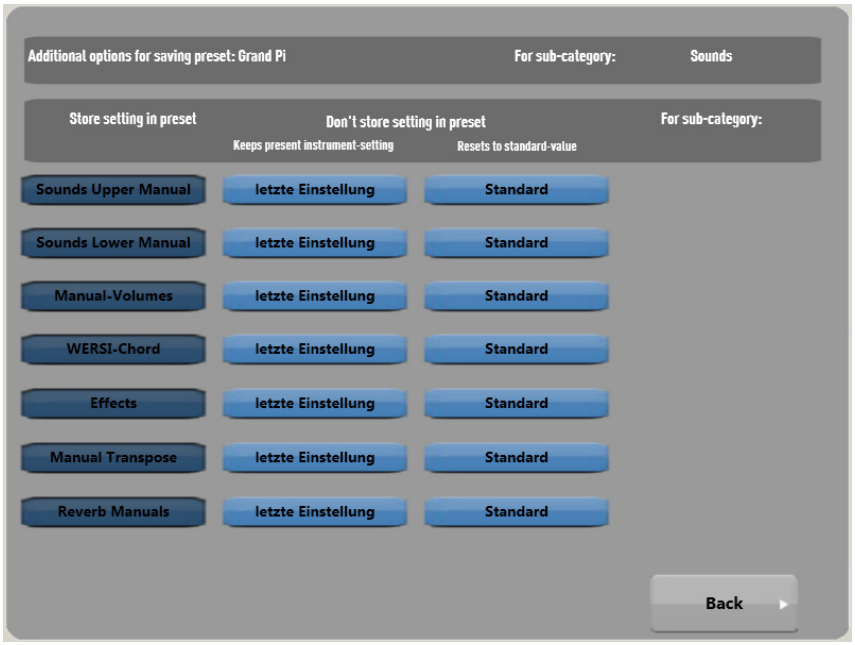

Sounds Options

1. Sounds Upper Manual (Choose to remember the sounds for the Upper Manual or not).

2. Sounds Lower Manual (Choose to remember the sounds for the Lower Manual or not).

3. Manual Volumes (Choose to remember the volumes for each manual and sound selector or not).

4. WERSI-Chord (Choose to remember the WERSI Chord type or not. WERSI-Chord is Auto-Harmony).

5. Effects (Choose to remember the Effects for the Manuals or not).

6. Manual Transpose(Choose to remember the Manual Transpose or not).

7. Reverb Manuals(Choose to remember the Reverb for the keyboard Manuals or not).

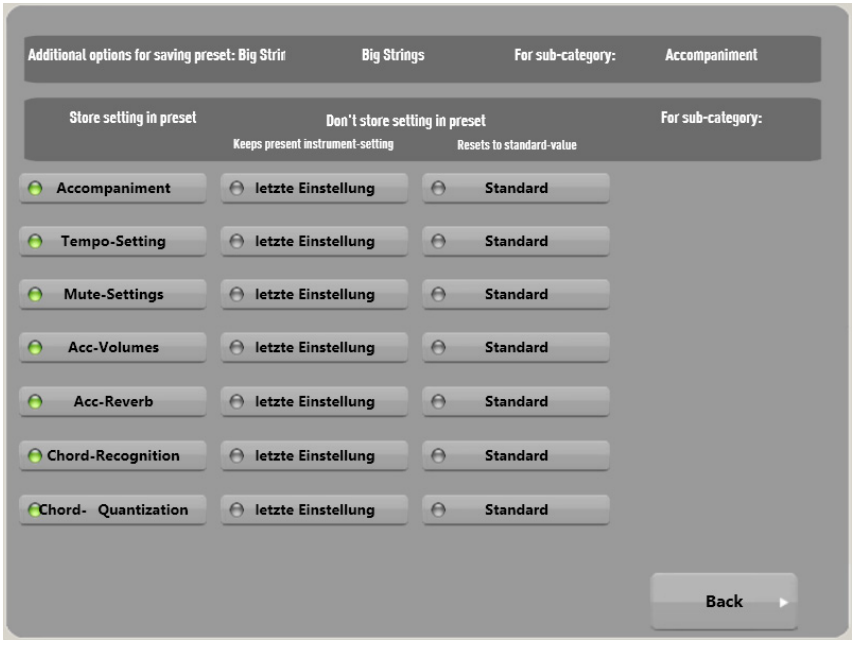

Accompaniment Settings

1. Accompaniment (The option to either save the currently selected Accompaniment or not).

2. Tempo-Setting (The option to either save the currently selected Tempo or not).

3. Mute-Settings (The option to either save any set Mute in the Acc-Mix / Edit Mixer or not).

4. Acc-Volumes (The option to either save the currently selected Accompaniment Volumes in the Edit Mixer or not - if already changed / selected).

5. Acc-Reverb (The option to either save the currently selected Accompaniment Reverb or default to the standard).

6. Chord Recongition (The option to either save the currently selected Chord Type set on the Main Display, or default to the factory standard / Style standard chord type).

7. Chord Quantization (The option allows you to set the new ChordQuanitze function in the Preset).

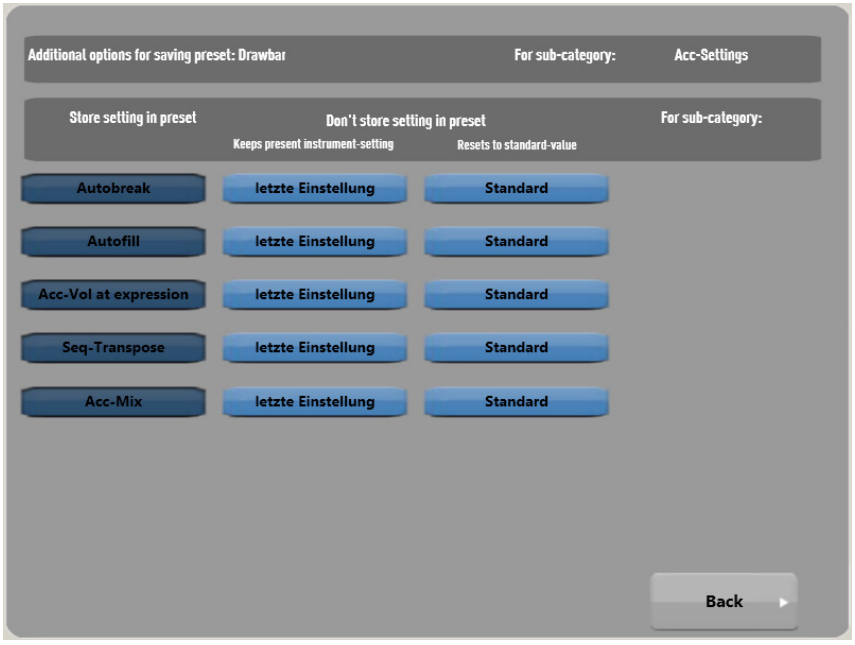

Acc-Settings Options

1. Autobreak (The option to either save the currently selected Auto-Break option, or to turn it off).

2. AutoFill (The option to either save the currently selected value of AutoFill or to use the standard value).

3. Acc-Vol at expression (The option to either save the currently selected value for the Accompaniment volume controlled via the expression volume. You can tell your Total Preset to remember the currently selected value or to default to the factory standard).

4. Seq-Transpose (The option to either save the currently selected Transposition for a MIDI Sequence. Naturally, you can also tell your Total Preset to ignore this setting too).

5. Acc-Mix (The option to either save the currently selected Acc-Mix Preset for Styles / MIDI Files etc). This is found in the 'Effect's page.

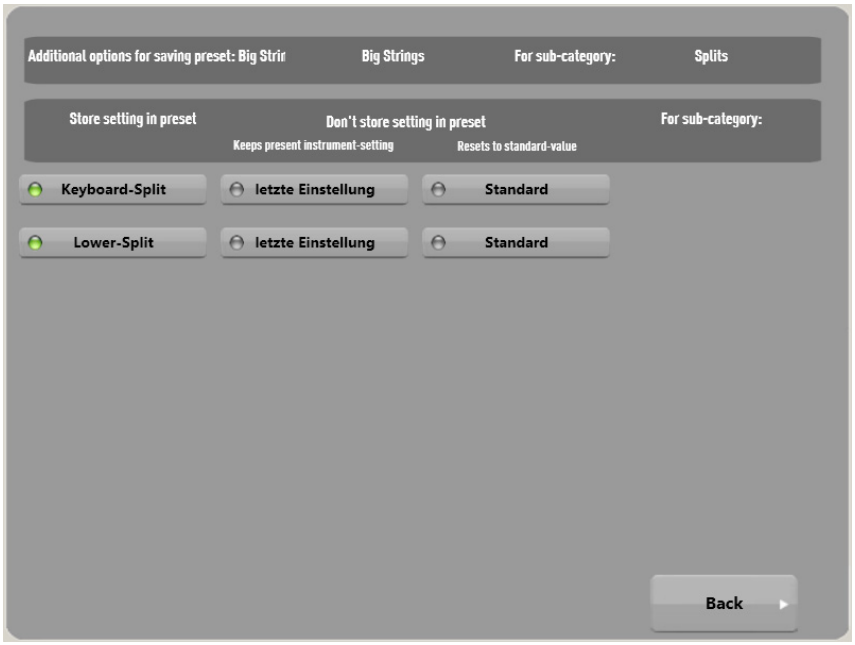

Splits Options

Options are:

1. Keyboard-Split (The option to either save the currently selected Keyboard Split, or default to the standard).

2. Lower Split (The option to either save the currently set Keyboard Split for the Lower Manual - can be used for either the Pegasus Wing as a single arranger keyboard or in duo pro format [Pegasus Wing Duo Pro] using the Lower Manual).

Use the 'BACK' button to exit to the previous display.

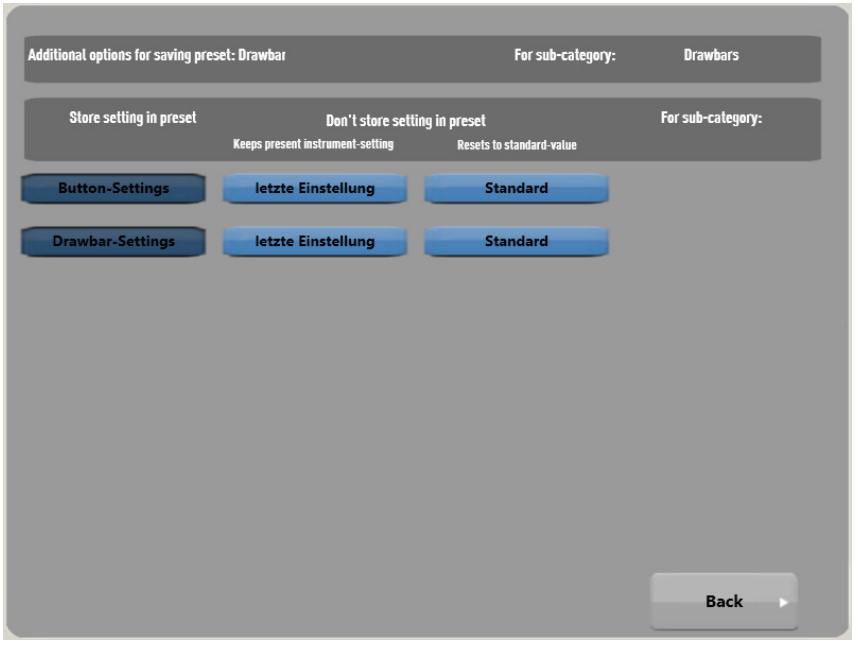

Drawbar Options

Options are:

1. Button-Settings (The option to either save the currently set Drawbar Button settings or to default to the standard settings of a Preset Drawbar setting).

2. Drawbar-Settings (The option to either save the currently set Drawbar Settings or to use the default settings).

Use the 'BACK' button to exit to the previous display.

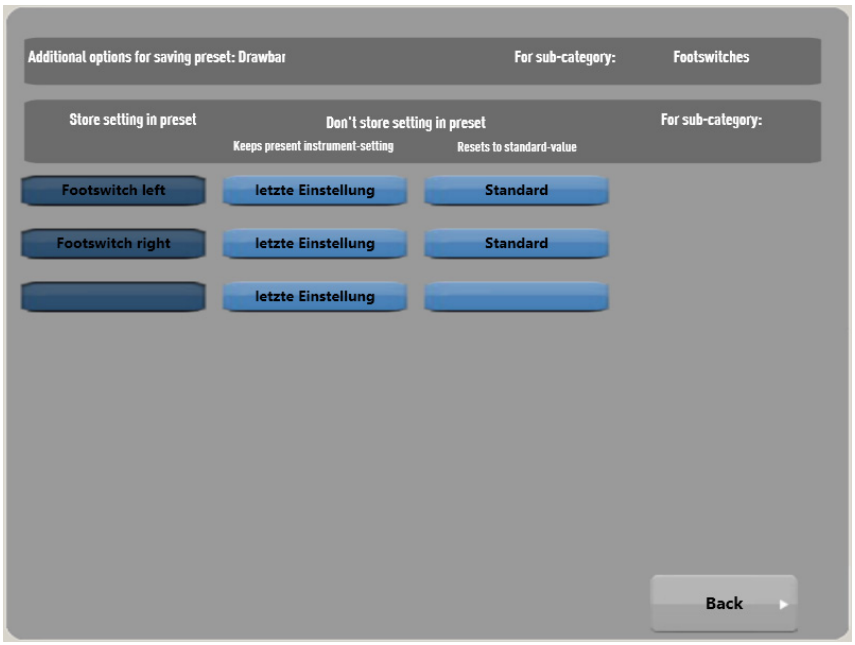

Footswitches Options

Options are:

1. Footswich Left (The option to either save the currently set Left Footswitch Setting or to default to the Factory Standard Setting).

2. Footswitch Right (The option to either save the currently set Right Footswitch Setting or to default to the Factory Standard Setting).

Use the 'BACK' button to exit to the previous display.

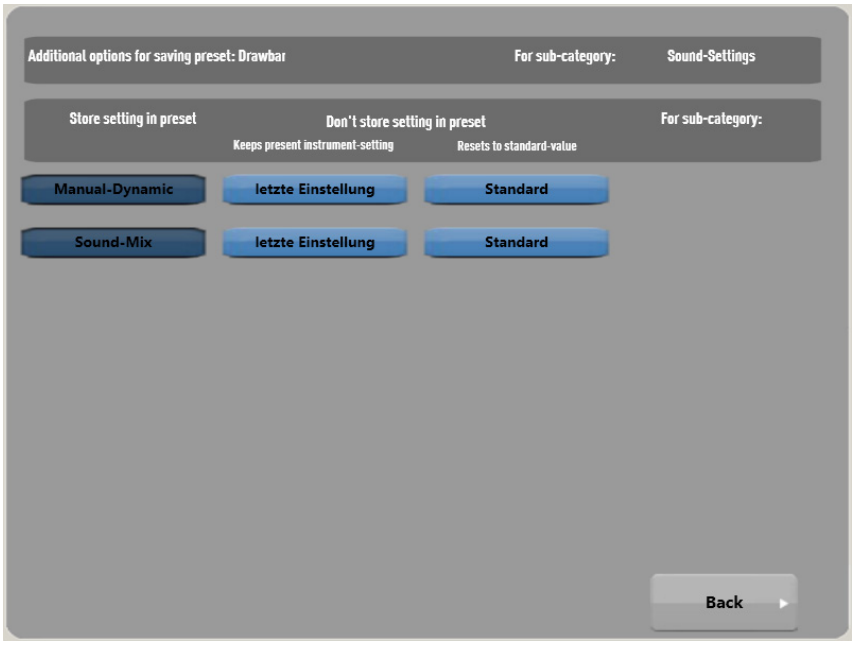

Sound-Settings Options

Options are:

1. Manual-Dynamic (The option to either save the currently selected Manual Dynamic settings in the General Settings Page, or you can press the 'Standard' button to default to the factory standard option for Manual Dynamic).

2. Sound Mix (The option to either save the currently set Volumes for the left and right hand as well as the pedals). It is here that you can choose to allow your Total Preset to save without remembering the Volumes for your Total Preset. This can be useful if you're playing on the fly!

Use the 'BACK' button to exit to the previous display.

Karaoke Function

With the new software you can load MIDI Files that contain Karaoke Text, which can be viewed on your instruments touch screen display.

Please refer to the main manual for information and instruction on loading MIDI files into your Pegasus Wing OAS database.

Once a MIDI file is selected, you will notice that the main display now shows an additional button below the Accompaniment information display:

Normal Display:

Display with Karaoke function available:

Press the Karaoke Button:

The Karaoke Display will now open. The text will highlight in red as the song and lyrics progress!

Rec.
CD
MAIN
Total Presets
Effekte
Einstellung
WERSI
BEGLEIT-ORCHESTER
fernando
Karaoke
ACC bearbeiten
Einfinger Wersi
Auswahl: Begleitung
midi5
Song remains the same
had to do the same again I would, my friend, Fernando Now we're old and grey Fernando And since many years I haven't seen a rifle in your hand Can you hear the drums Fernando? Do you still recall the frightful night We crossed

Resizing the Karaoke Display

You can resize the Karaoke display by using two fingers on your touch screen display. Put your fingers in the corner of the Karaoke window (bottom corner) and simply draw your fingers wider until the Karaoke box widens to your command.

Closing the Karaoke Display

To close the Karaoke Display, you can either press on the 'Karaoke' button (and the green LED will turn off) or you can select an accompaniment Style or Realdrum.

PLEASE NOTE: Not all MIDI Files contain karaoke lyrics. You should only purchase your MIDI files from professional and reputable re-sellers, who almost always advise of whether the MIDI file that you wish to purchase contains Lyrics.

Additional Settings:

With the new OAS Pegasus Wing Version 2 software, two new additional MIDI settings have been added.

You can find this under 'SETTINGS' / 'GENERAL SETTINGS'.

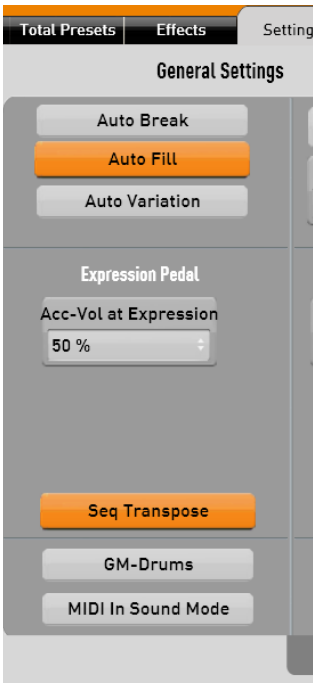

Seq Transpose

The Seq Transpose button (shown here highlighted in Orange) is a function that when highlighted (to show it is actively in use), means that any MIDI Sequence selected can be transposed along with the manuals in semitone adjustments. When you transpose the Pegasus Wing, you will also transpose the sequence too. You can turn this option off by pressing on the button (which will return to Grey). You can also store this setting in your Total Preset.

GM-Drums / XG-Drums

This button allows you to change the definition between GM-Drums standard and XG-Drums Standard. XG Drums is a MIDI standard developed by Yamaha Co, Japan for an expanded MIDI drum capacity. Refer to Google.com if you'd like to know more about XG MIDI standards.

MIDI In Sound Mode / Multi Mode

The button at the bottom allows you to switch your Pegasus Wing between two different modes. The first mode 'MIDI In Sound Mode' means that your Pegasus Wing MIDI In port is set to receive data for the Upper Manual, Lower Manual and Pedals on the following MIDI channels: Channel 1 = Upper Manual (Right Hand), Channel 2 = Lower Manual (Left Hand) and Channel 3 = Pedals.

If you press the button, you will activate the 'MIDI In Multi-Mode' which allows all 16 MIDI channels to be accessed by another MIDI instrument or PC Sequencer for example. You can playback MIDI files from a MIDI host or perhaps if you are editing a Style or Sequence in software such as Logic, Cubases etc.

PLEASE NOTE: The change to your instrument will only take place upon selecting the mode after instrument startup.

TIP: If you are not familiar with MIDI systems, there are many well authored books available from amazon.co.uk or amazon.de on the subject. All matters are extensively covered.

PLEASE NOTE: *for Manual MIDI Out, the data is transmitted on the following channels:*

Right Hand (Upper) = MIDI Channel 1

Left Hand (Lower) = MIDI Channel 2

Pedal = MIDI Channel 3

MIDI Out Manual Easy Mode

The button MIDI Out Manual Easy can be turned on or off.
When active, it highlighted in Orange:
This function literally allows you to send MIDI data from the Pegasus Wing keyboards to an external source through the MIDI Out connection.

MIDI Style Out

The button MIDI Style Out can be turned on or off.
When active, it highlighted in Orange:
This function literally allows you to send the Style player data as MIDI events to an external source via the MIDI out connection.

MIDI Seq Out

The button MIDI Seq Out can be turned on or off.
When active, it highlight in Orange:
This function literally allows you to send MIDI Sequence data to an external source via the MIDI Out connection.

Advanced Footswitches

Since the first version of the OAS software, there were some glitches, which have now been addressed and corrected with the new OAS Pegasus Wing Version 2 software. Additionally, new functions have been added too!

Pegasus Wing Footswitch Information		
Function Name	**Effect**	**Additional Information:**
Sustain Upper Manual	Sustains the Upper Manual / Right Hand	
Sustian Lower Manual	Sustains the Lower Manual / Left Hand	
Intro / Ending 1	Starts a style / realdrum with intro 1, or when playing, allows you to finish with ending 1	Function ending corrected in Version 2. R00.03
Intro / Ending 2	Starts a style / realdrum with Intro 2 or when playing, allows you to finish with ending 2.	Function ending corrected in version 2 R00.03
Break	Plays a 1 bar Accompaniment Break	
Rotor Slow / Fast	Speeds up and slows down the Rotor effect	
Preset Next (Preset Up)	Moves you to the next Total Preset higher in your Total Preset list	Function corrected in the new software version 2 R00,03
Preset Back (Preset Down)	Moves you one Total Preset down from your currently selected Total Preset	Function corrected in the new software version 2 R00.03
Transposer Higher	Transpose Up	Function corrected in the new software version 2 R00.03
Tranposer Lower	Transposer Down	Function corrected in the new software version 2 R00.03
Variation Next	Move to the next higher accompaniment variation	
Variaiton Back	Move to the next lower accompaniment variaiton	
Hawaii	Hawiian glide effect (pitch bend)	
Break + Variation Back	Trigger an accompaniment break and move to the next variaiton down at the same time	
Break + Variaiton Next	Trigger an accompaniment break and move to the next accompaniment variation higher at the same time.	
Upp2 On / Off	Turn on or off selector Upper 2	
WersiChord On / Off	Turn the WERSI-Chord function on or off	
Umschaltung Upp1/Upp2		New in version 2 software!
Rotor Short	Tigger the Short speedup effect of the Leslie Rotor	New in version 2 software!
Rotor Long	Trigger the Long buildup effect of the Leslie Rotor	New in version 2 software!
Keine Function	No function assigned to the footswitch.	New in version 2 software!

New Drawbar Tone Generator VB3

The new VB3 Tone Generator is completely free of charge and inclusive of the new V2 OAS Pegasus Wing software. The VB3 has been hailed as one of the most realistic and detailed clones of the Hammond organ 'B3' sound. It has been acclaimed in its authenticity and detail. The VB3 is a VST and a special WERSI edition has been produced by the VB3 development team that naturally integrates into your Pegasus Wing keyboard.

Of course all aspects and functions of the VB3 drawbars are controlled over the Pegasus Wing drawbar controls and real drawbars just like the normal Drawbar System works.

There are 32 Preset Factory VB3 Sounds included as standard. These are mapped from Level 4 on the Drawbar button upwards.

You can clearly see that the VB3 Drawbars are located on Level 4 of the Drawbar Button.

When you press on the Upper 1 Drawbar button in the physical control group, you will automatically be taken to Level 4 rather than Level 1 (where the standard Drawbar System sounds are mapped) as we believe these to be the better Preset Sounds for you to quickly access.

For the Left Hand / Lower Manual, the VB3 sounds are located on the Drawbar Button, Level 2.

VB3 - the VST (Virtual Studio Technology Instrument)

Because your Pegasus Wing arranger keyboard / Duo Pro is such a clever instrument, it is open to the VST standard. This means that WERSI developers can use special (or off the shelf) VST instruments and integrate them into your instrument directly.

THE VB3 is no exception. This opens up a whole world of controls, settings and additional sound parameters as well as advanced functionality too for you to play and experiment with!

Display the VST facility for the VB3 Drawbar Tone Generator

Under the 'Setting ' page, you have the possibility to change the VB3 sounds and organ sounds further than you can on the control switches and buttons of the Pegasus Wing panels.

At the bottom left of the 'Settings' page, you'll find the 'Drawbar Plugin Edit' page. Press on this. The display will now show the following:

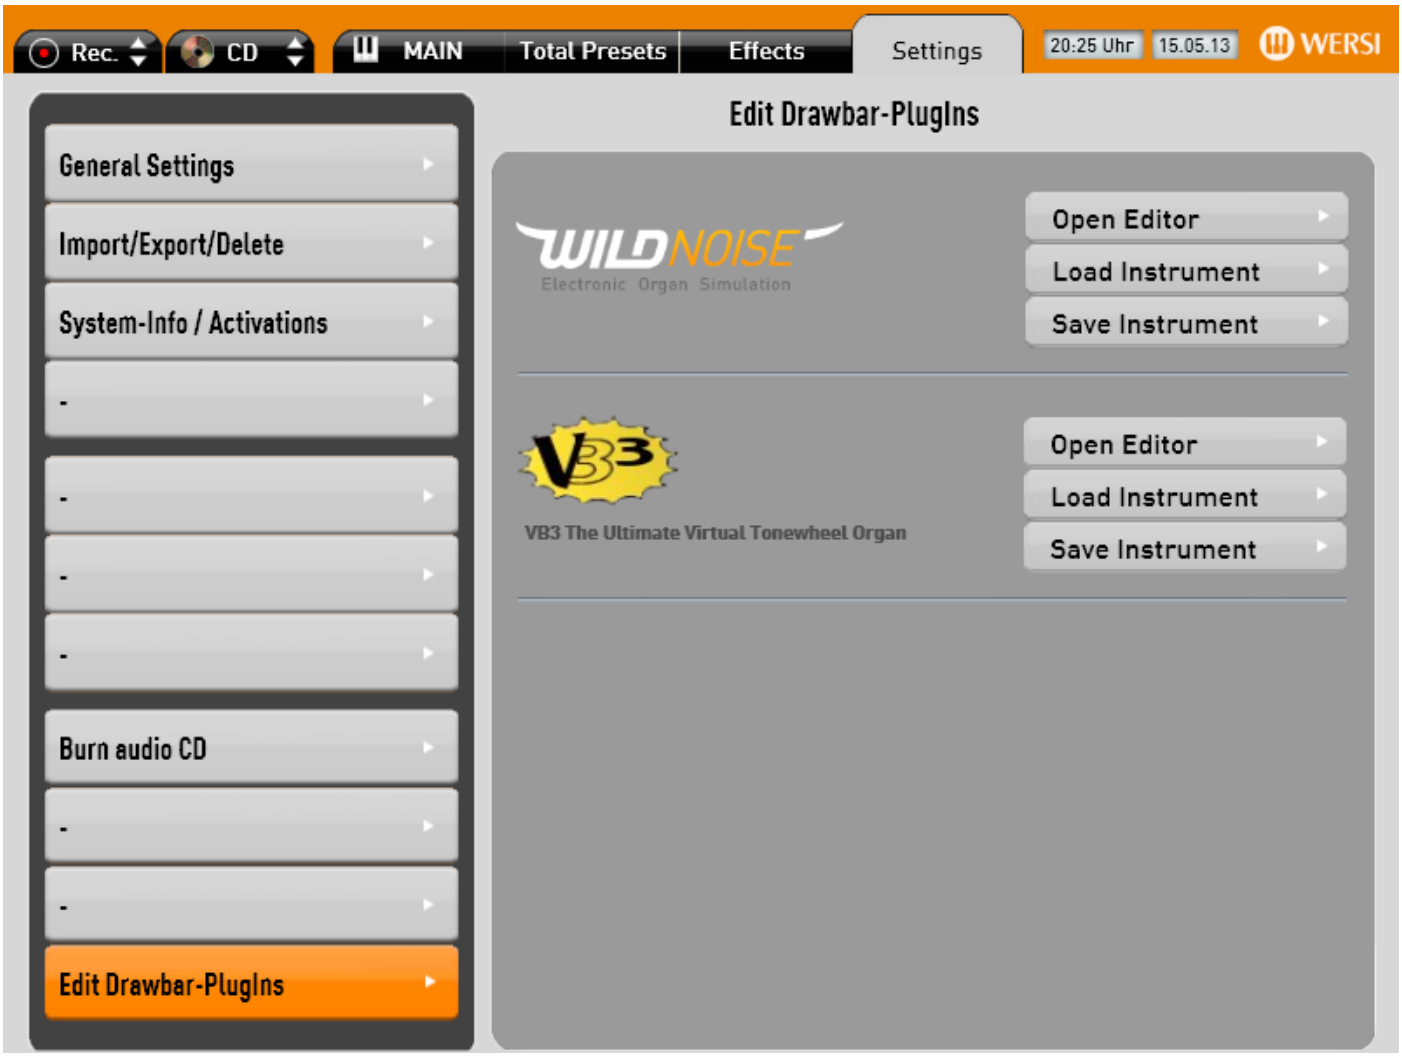

You'll see that the 2nd option down is the 'VB3' - the ultimate Virtual Tonewheel Organ. Next to the logo is the:

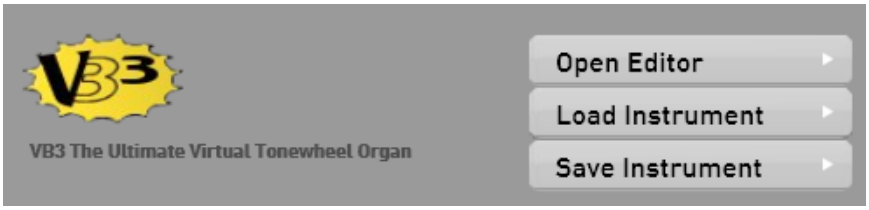

Open Editor:
This button allows you to open the VB3 Editor.

Load Instrument:
This button allows you to open and load a VB3 Instrument List.

Save Instrument:
This button allows you to save a VB3 instrument list. We will provide more information on Loading and Saving instruments after we've explained the VB3 VST.

Open Editor (VB3)

Press on the 'Open Editor' button in the Drawbar Plugin Edit page. The following display will be shown:

Here the controls for the entire VB3 can be found. There are numerous Controls, but we'll describe them all the same as they are explained for bigger OAS 7 instruments in their respective programmers manual. In fact, the Pegasus Wing VB3 Editor gives you direct access to more options than is normally discussed even with the bigger instruments!

Overdrive / Reverb

On / Off - Use this switch to turn the Overdrive / Reverb controls on or off.
Drive - Use this turn switch to increase or decrease the value of the Drive intensity.
Edge - Use this turn switch to control the edge effect of the drive function.
Reverb - Use this turn switch to increase or decrease the amount of Reverb to be applied to the VB3 organ sound!
Key Click - Use this turn switch to increase or decrease the volume of the Key Click effect.

Vibrato and Chorus

Up - Use this rocker switch to turn the Vibrato and Chorus effect on or off for the Upper Drawbar set.
Lo - Use this rocker switch to turn the Vibrato and Chorus effect on or off for the Lower Drawbar set.
V-3, C-3, V-1, C-1, V-2, C-2, - The V stands for Vibrato and C stands for Chorus! Experiment wit these famous vintage settings.

Transpose Upper Manual

Transpose - These buttons allow you to change the transposition up 12 semitones or down 12 semitones. It is perhaps a slightly redundant feature as the OpenArt-System of the Pegasus Wing will automatically transpose the VB3 regardless.

Percussion Control

On / Off - This Rocker Switch allows you to turn the Percussion effect on and off.
Soft / Norm - This Rocker Switch allows you to choose whether you wish to have a soft percussion effect or a normal more prominent percussion switch.
Fast / Slow - This Rocker Switch allows you to choose between a Fast or Slow type effect for the Percussion.
3rd / 2nd - This Rocker Switch allows you to switch between the all important 3rd harmonic percussion tone or the 2nd harmonic percussion tone. Think Jimmy Smith!

Microphones

Distance - This turn knob allows you to adjust the distance of the microphone simulation capturing the Leslie cabinet type effect.
Balance - This turn knob allows you to adjust the balance of the Microphones.
Ambiance - This turn knob allows you to adjust the intensity of the recording room ambiance of the Leslie cabinet.
Spread - This turn knob allows you to adjust the Spread (Stereo effect) of the sound.

Rotary Speakers

Rotary Speakers - This pull knob allows you to change the Rotary effect between Slow, Stop and Fast.

Pedal

Pedal Volume Slider - This volume slider allows you to independently set the volume of the VB3 Peda Drawbars.
Tone - This Turn known allows you to adjust the Tone of the Pedals.
Volume - This allows you to make additional volume amendments.

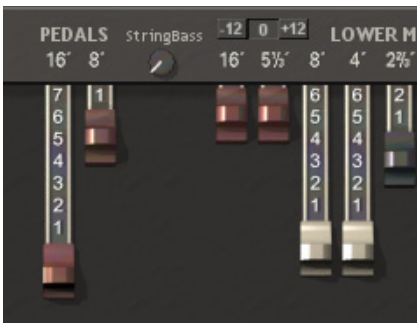

Transpose Lower Manual

Transpose - These buttons allow you to change the transposition up 12 semitones or down 12 semitones. It is perhaps a slightly redundant feature as the OpenArt-System of the Pegasus Wing will automatically transpose the VB3 regardless.

Pedals - Stringbass - This control allows you to increase the Pedal String Bass effect, unique to the VB3.

VB3 - Advanced VST Options

With the VB3 VST edit window open, as well as the controls that you can see on the display, there are many more options available for you to explore. At the top of the Display you'll see 'Preset Options Menu' 'Global Options Menu'.

By pressing and holding your finger down for 3-5 seconds over the Preset Options Menu, you'll note that the following display will now be shown:

You can then enter into the different options by pressing on the menu that you wish to access. You can access the VB3 Preset Sounds by pressing on the 'Preset List' option. You can then press on of the sounds in the long grey list to select it.

Waveform Set

This allows you to change the Tonewheel Waveform. Waveforms available are:

Set H - Tonewheels
Set F - Italian Transistor
Set V - Red Tolex

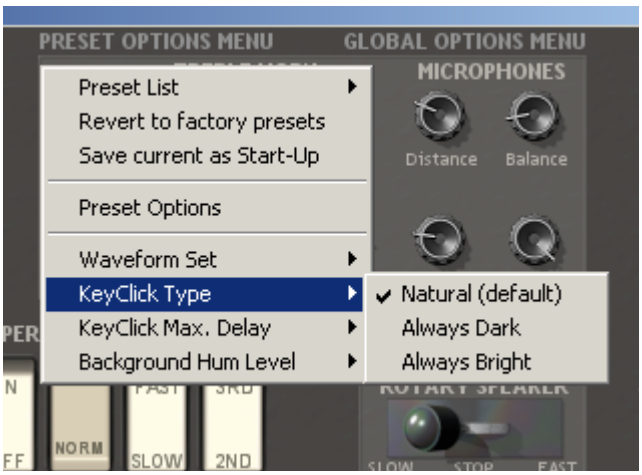

KeyClick Type

1. Natural
2. Always Dark
3. Always Bright

KeyClick Max Delay

Choose between a setting of 1 millisecond and 39 milliseconds.

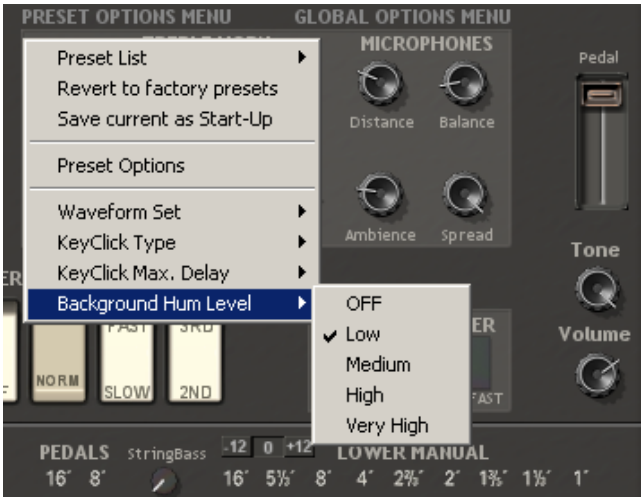

Background Hum Level

This setting allows you to replicate the old style Background Hum generated by the electronic tonewheels. Choose between Low, Medium, High or Very High!

Global Options

The 2nd menu is the 'Global Options Menu'. It is from here that you can set additional settings such as MIDI Channels, Pedalboard and MIDI response, what MIDI program change commands the VB3 should recieve. There is also a multitude of other settings directly related to the VB3 sound and organ characteristics. Fortunately for you, the WERSI Edition doesn't need to be changed in terms of MIDI channels or MIDI responses, however, you can alter the Sound Characteristics and experiment with the organ sounds.

The Global Options Menu: *(To open the Global Options Menu, press on the title 'Global Options Menu' for 3-5 seconds).*

Saving a VB3 Sound / Plugin Adjustment

It is possible to save your VB3 sound adjustments once you've altered a sound. To do this, in the 'Edit Drawbars Plugin' display, press the 'Save Instrument'.

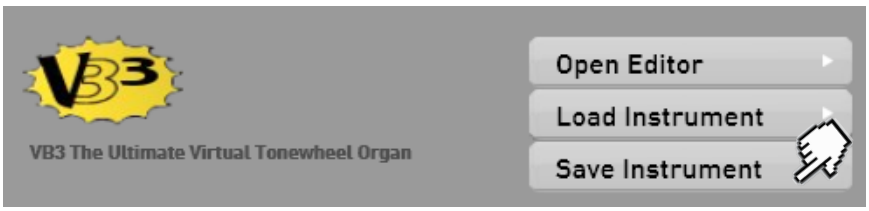

A new display will be shown:

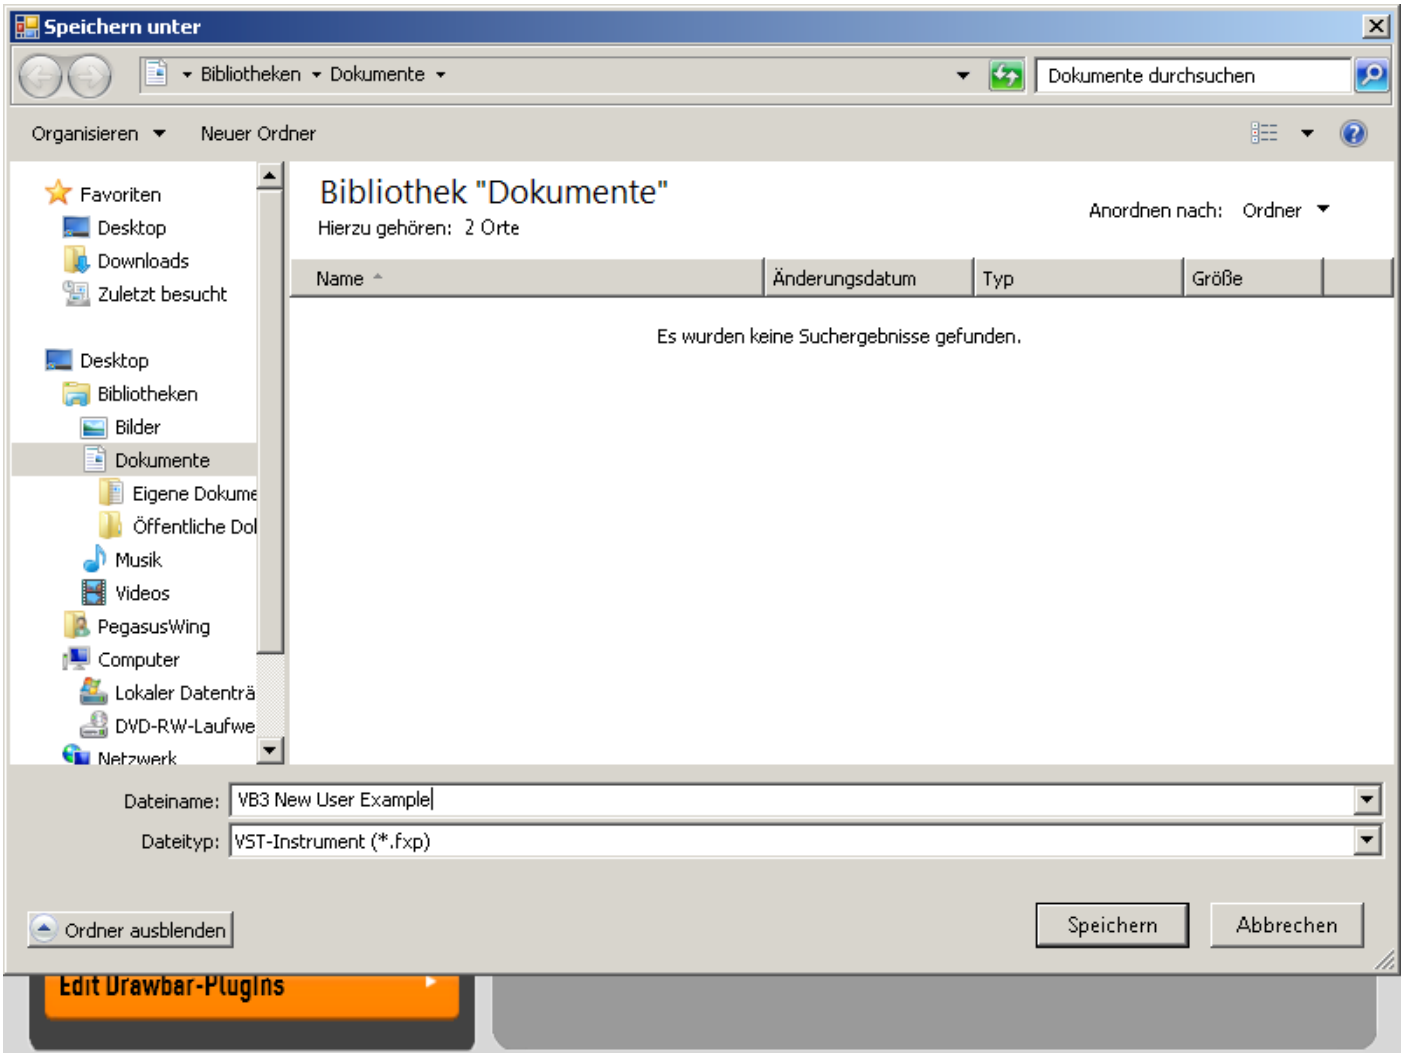

You can choose the destination of where you'd like to save the new VB3 User Sound... in our example, we're saving it to the folder titled 'Documents'. You can of course save it to a USB memory stick if you have one inserted for backup purposes.

Give your User Instrument a Name:

Connect a USB PC keyboard to your instruments USB port and enter in a name that you would like your user instrument to use. Then press 'Save' (Speichern) in German.

PLEASE NOTE: Abbrechen translates to 'Cancel' in English.

Loading a VB3 Sound / Plugin Adjustment

It is possible to load your previously saved VB3 sound adjustments for later recall. To do this, in the 'Edit Drawbars Plugin' display, press the 'Load Instrument'.

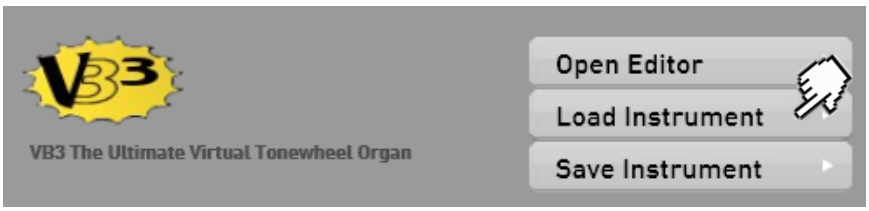

A new display will be shown:

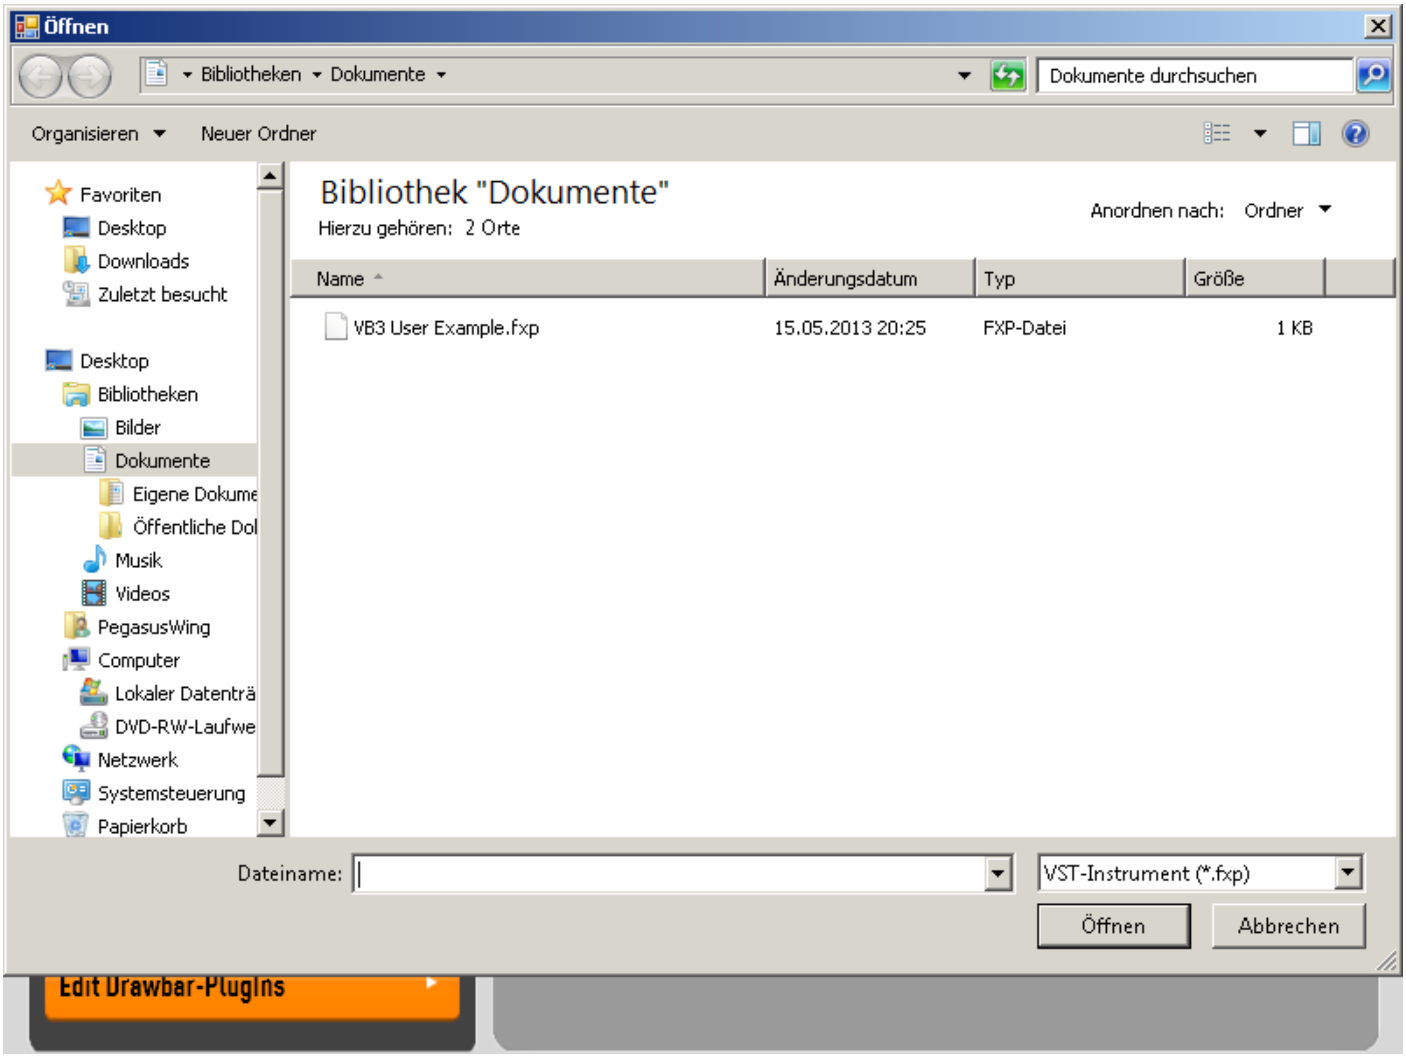

Navigate to where your VB3 User Instrument is stored. In our example, it is stored in the folder 'Documents'. If a folder contains such a file that we looking for (VST Instrument .fxp) then it will be shown:

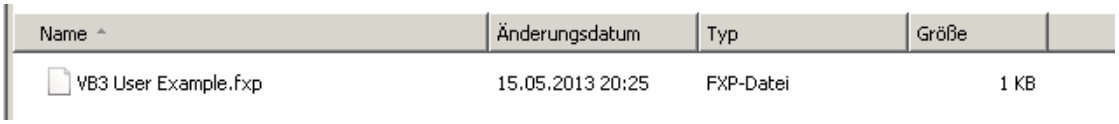

Press on the file so that it highlights and then press on the 'Offnen' button (translates to 'Open' in English). Your VB3 User Instrument will now be loaded directly in the VB3 ready for use.

VB3 Sound List / Levels

VB3 Sound	Button Level
Zugriegel Standard	Level 4
Zugriegel Weich (Soft)	Level 4
Zugriegel Verzerrer	Level 4
Zugriegel Roto <->	Level 4
ZR Ro/VibC-3+Perc3rd	Level 5
ZR Rotor + Perc 2nd	Level 5
ZR Rotor Rock	Level 5
ZR Rotor Gerade	Level 5
ZR Alone in town	Level 5
ZR Funky	Level 5
ZR Solo Dunkel	Level 5
ZR Solo Hell	Level 5
ZR Ballade	Level 5
ZR Rotor + Perc 3rd	Level 6
ZR Vibrato V-3	Level 6
ZR 5th Trick	Level 6
ZR Square Wave	Level 6
ZR Slow Tunes	Level 6
ZR Sweet	Level 6
ZR Flutes	Level 6
ZR Pick the sound	Level 6
ZR Rotor Offen (Open)	Level 6
ZR Vibrato C3	Level 7
ZR Rotor weit	Level 7
ZR Invention	Level 7
ZR Bright comping	Level 7
ZR Dark comping	Level 7
ZR Reeds	Level 7
ZR Strings	Level 7
ZR Italian Transistor	Level 7
Dist Organ (Distortion)	Level 7
Dist Organ 1 (Distortion)	Level 7
Farfiasa	Level 8
Gospel Organ 1	Level 8
Gospel Organ 2	Level 8
Gospel Organ 3	Level 8
Jimmy 1	Level 8
Jimmy 2	Level 8
Jimmy 3	Level 8
Jimmy 4	Level 8
Old B3	Level 8
Rock Organ 1	Level 8
Rock Organ 2	Level 9
The B3	Level 9
Vox Organ	Level 9

VB3 Trouble Shooting

It has come to our attention that customers have reported a whirling noise coming from their Pegasus Wing instruments. This is a feature of the VB3. It is called: Rotary Wind Noise.

In the VB3 Plugin Edit, open the **Global Options Menu.** The 5th option from the bottom of the Global Options menu list is: **Rotary Wind Noise**. Turn this to **Off.**

Then Save your VB3 instrument as explained on the previous pages so that the effect is turned off permanently.

Editing a Style

It is now possible to edit a Style within the Pegasus Wing. With regards to what is possible, you can edit all Style Parts (Intros / Endings / Breaks / Variations etc). You can alter parameters such as instrument sounds to be played by the style parts and their respective tracks, the effects (Reverb, Echo an Chorus) as well as Panorama, Volume and Octave settings.

To open the Style Editor, follow this procedure:

1. Load a Style that you wish to edit.
2. Press the 'Edit Acc' button on the main display.
3. The Style Mixer will be displayed. In the Bottom Right corner of the mixer, a blue button titled 'Advanced' will be shown. Press this to open the Style Editor.

The following display will be shown:

New General Settings Options

With the new software comes yet more options for Pegasus Wing customers. On the General Settings Page, at the bottom there is a tab that is labelled 'Page 2': Press on this.

The display will change to the following screen:

You'll note that the Footswiches display is now very different to the old OAS Pegasus Wing software. It now correctly shows the Left and Right switches and their respective menus that can be used to select different functions for the footswitches.

Additionally, Footswitch 1 and Footswitch 2 are now correct and available for you to assign functions to. Finally, there is a new switch labelled 'Single Switch'. This is naturally for you to also assign a function to.

New Options

Depending on which of the three new options is selected, depends on the setting currently in use by your Pegasus Wing.

The option 'Use Setting from Total-Preset' means that your Pegasus Wing will retain the setting that is stored into the current Total Preset that is selected.

The option 'Always use last setting' means that the Pegasus Wing uses the last Total Preset stored setting of the Total Preset that was selected when you choose to activate this option.

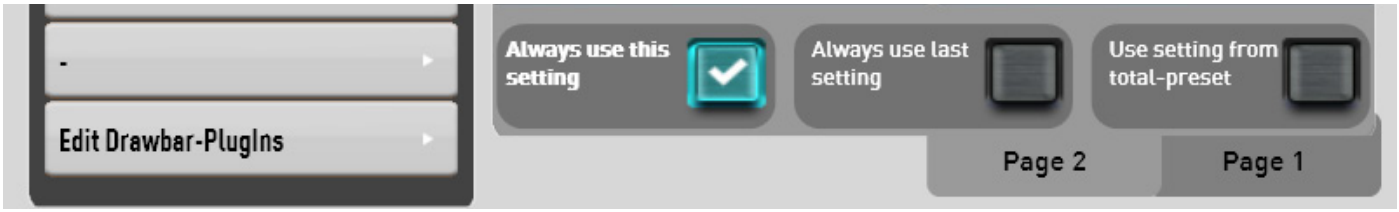

The option 'Always use this setting' means that your Pegasus Wing will use the currently set setting until you tell it otherwise. What you see on the display is the setting that will be used.

New Activations

Naturally with any new software you'll see new expansions for your Pegasus Wing. Of course we are WERSI, the company who invests in development of your beautiful and incredibly future proof instruments!

In the Settings page, you'll see 'System-Info / Activations' on the left hand side of the display. Press this so that it changes to orange. Then at the bottom of the page, go to 'Seite 3' (Page 3).

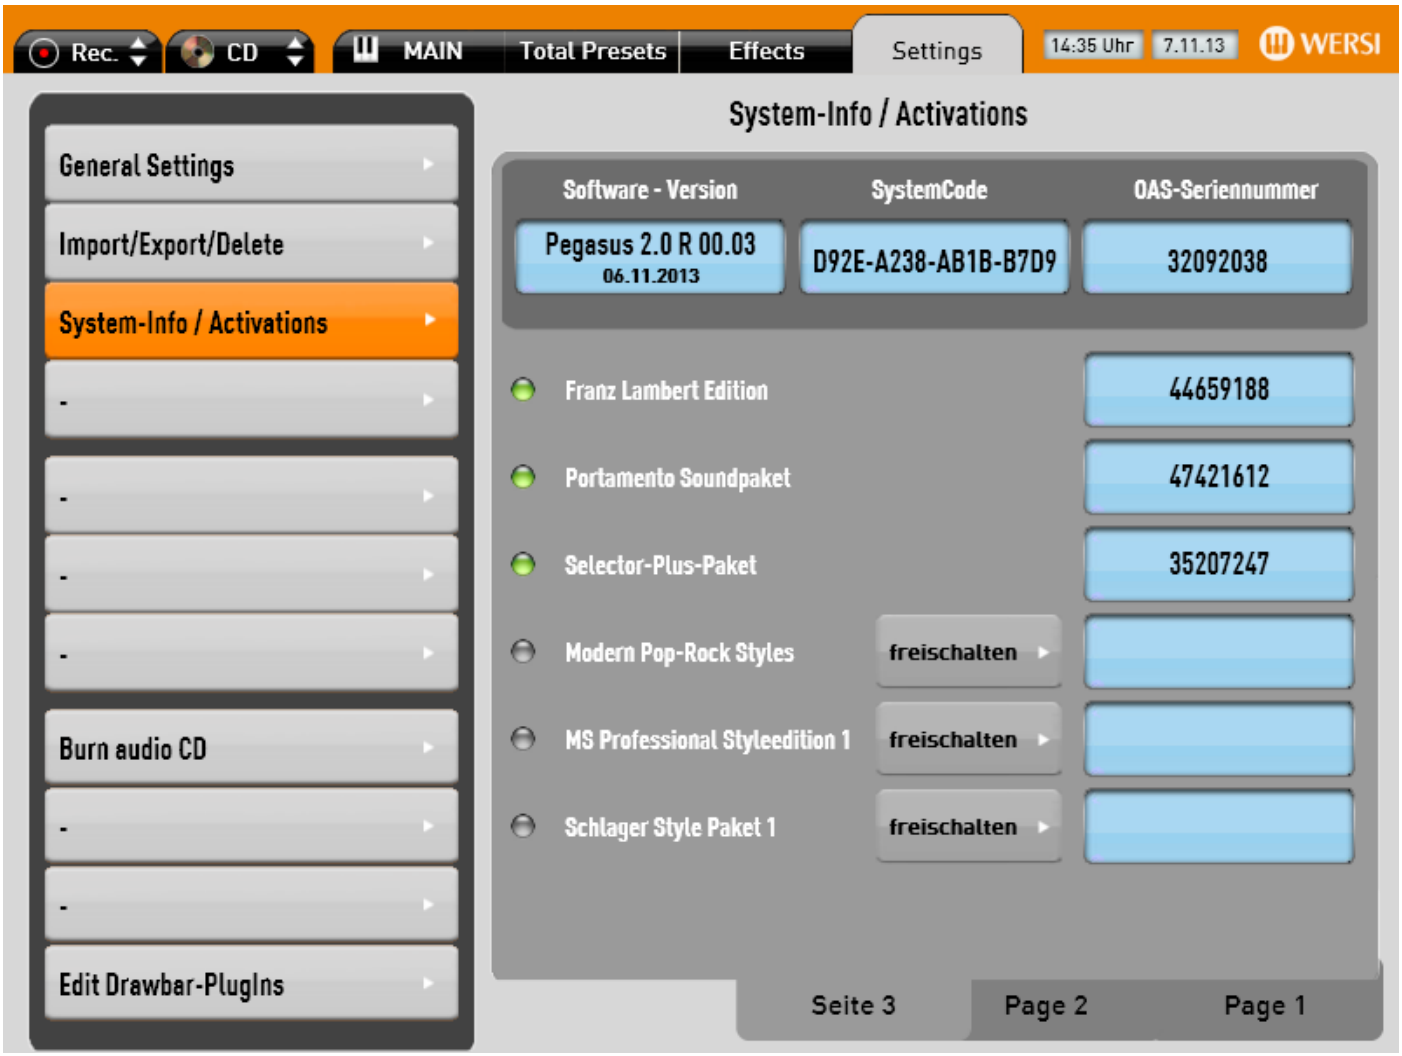

You'll see that there are three new Style Editions waiting to be activated:

1. Modern Pop-Rock Styles
30 new Styles with a modern Pop / Rock feel, created by the musicians at WERSI Direct Ltd. There is a varied genre of Styles for you to use from Dance and Pop styles to Maches and Waltzes!

2. MS Professional Style Edition 1
18 new Styles from the professional musicians at Musicstore Professional, exclusively developed by the Pegasus Wing.

3. Schlager Styles
5 new Styles in the typical Schlager Party Style!

Three new Style Expansions for the Pegasus Wing!

With the introduction of the new software Pegasus Wing V2 R00.03, we're very pleased to see that there are three brand new Style Expansions!

WERSI make a commitment with the OpenArt-System to continually provide new content and new functions.

With the new software, there's mew improvements as well as new Styles! Some 56 new Styles in total across the three packages.

Let's have a look at the new Styles across the three new style packs.

Style Pack 1 (MS Professional Styles)

A collection of 20 brand new styles with 4 variations, three intro / endings, 4 x fills etc.

The styles are:

Dance 1
Dance 2
Dance
Gri. Wein
Pop Ballad
Pop Ballad 1
Pop Dance (Realdrum)
Pop Funk
Pop Funk 1
Rock JP
Rock JP 1
Rock Shuffle
Rock Shuffle 1
Standard Beat
Standard Beat 1
Straight Rock
Piano Ballad
Piano Boogie

Style Pack 2 (Modern Pop/Rock Styles)

A collection of 30 brand new styles with 4 variations, three intro / endings, 4 x fills etc.

This style pack has a more eclectic feel and covers many musical genres from ABBA to BigBand Swing, Epic Movie Styles and Ballads!

The styles are:

6/8 British March
70's ABBA Disco
8 MegaBit Disco
80's Look of Luv Disco
Brush Swing
Disco Glitter Wah
Elektro Love Beat
Elton Rock
Goodbye Bolero
Human League Pop
KBush Hill Beat
Lambada Party
Maroon Jagger Pop
New Waltz
Proud Mary 1
Proud Mary 2
Rock N Rolla
Samba Ball Party
Toni Braxton Ballad
Twist
8 Beat Arabic Pop
8 Beat Arp Pop
80s Ballad
Belinda Heaven Rock
Country Stomp
Gladiator Epic
Madonna Ballad
Rhianna World Dance
Speilberh March
Whigfield Party

Style Pack 3 (Schlager Styles)

A collection of 5 brand new styles with 4 variations, three intro / endings, 4 x fills etc.

This style pack has been designed for classic Schlager Styles, which are typical German Party pop songs!

The styles are:

1. zwaluw maakt nog geen zomer
2. Saturday Dennie Christian
3. I am the 2013 Dance
4. Mooi was die tijd 1000x
5. We’re going to Ibiza - Vengaboys